



887
UPSTREAM OXYGEN SENSOR
F4R416/FLEXFL/TR4X2/CA/BVM6/ENPC01

N°	mm ²			
4	0.5	3FB1	INJECTION + > PROTECTIVE RELAY	F005E
2	0.5	3GK	UPSTREAM OXYGEN SENSOR SIGNAL	F005E
1	0.5	3GH	UPSTREAM OXYGEN SENSOR EARTH	F005E
3	0.5	3GF	UPSTREAM OXYGEN SENSOR HEATER - CONTROL	F005E